

AG25 CANTILEVER UMBRELLA ASSEMBLY AND USE INSTRUCTIONS

Phone: 61 2 8863 0400 Fax: 61 2 9636 4719 Unit 4 / 1 Foundation Place Prospect NSW 2148

Components

After taking the umbrella out of the carton, please make sure that you inspect the included components.

COMPONENT	REF	QTY	
AG25 Frame	A	1	
Vent top Plastic Cap	В	1	
Fabric Canopy (in bag)	С	1	
Ballast Block Frames	D	2	
Crank	E	1	
Rotate Bearing	F	1	
20mm Bolt / Washer (+ Allen Key)	F1	4	
25mm Bolt / Washer (+ Allen Key)	F2	2	
# 3/ # 5/ # 6 Allen Keys	G	3	
Protective Cover and Metal Wand (in bag)	Н	1	

 
AG25 Mounting Options

Mounting Option 1: Onground Plate

Suitable for a concrete slab (minimum 10cm thick) or a concrete column (30cm diameter by 75cm deep). With this option the umbrella can be rotated. Purchase 4 Stainless Steel masonry anchors such as 10mm x 75mm Dynabolts from your local hardware.

1. Place the Onground Plate in the required location. Use metal spacers if the surface is not flat and horizontal. Mark the position of the 4 corner holes with a felt pen. Use a 10mm masonry bit to drill holes to a depth of 80mm. Fasten the Plate to the slab using the 4 masonry anchors.

 If necessary, remove the Rotate Bearing (F) from the bottom of the Side-post and attach to the Onground plate using the four M8 x 20mm bolts and washers provided



Mounting Option 2: Shelta Resin Base (not included).

Suitable for most surfaces including timber decks. Purchase a Shelta Large Resin base from your local retailer (wheeled and non-wheeled versions available). Note: the Ballast Block Frame and the Onground Plate are not required for this option.

100 Kilos of 5mm blue metal and 10 Kilos of sand will be required to fill the Resin base for ballast

1. Remove the square plate from the bottom of the Rotate Bearing (F) by unscrewing the 4 countersunk screws.


2. If necessary, remove the Rotate Bearing from the bottom of the Side-post and attach to the Resin Base "Top Hat" using the 4 countersunk screws.

3. Follow the assembly instructions included with the Large Resin Base.

Mounting Option 3: Ballast Block Frame (C included).

Suitable for most surfaces including grass. **This should be ballasted with between 110 and 140 kilograms of weight**. Purchase at least 6 Shelta Resinstone Ballast Weights or concrete pavers (45 x 45 x 4cm) from your outdoor retailer or hardware.

- 1. Assemble the 2 parts of the Ballast Block Frame (C) at right angles.
- If necessary, remove the Rotate Bearing (F) from the bottom of the Side
 -post and attach to the Ballast Block Frame using four M8x20mm
 screws and washers provided.
- 3. Place the assembled frame in the required location. Note: for safe use the surface should be flat and horizontal.
- 4. Place at least 6 Resinstone or paving blocks on the assembled frame with double-stacked blocks on the side opposite the umbrella.

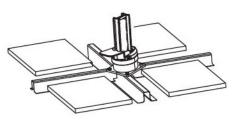

Operating Instructions

- 1. Loosen ribs prior to winding.
- 2. Release the slide tilt and lift to the top position.
- Opening. Turn the crank clockwise, the umbrella will open. Turn the crank anticlockwise, the umbrella will close. When cranking, if you feel pressure and the umbrella is not opening, spread the umbrella ribs using your hands, then continue to crank open.
- Tilting. When you want to change the angle of your umbrella (Tilt), slide the runner up
 or down the mast until you reach the angle that you desire. Rotate tilt lock knob clockwise to lock.
- Closing. When closing umbrella slide the knob down towards bottom of mast, at same time turn handle anti-clockwise to close the umbrella. Use fabric tie to secure umbrella frame to mast.
- 6. Rotating. The umbrella will rotate 360 degrees by simply stepping on the base pedal; rotate the main frame by hand. When the umbrella reaches the position desired, release the foot pedal and the umbrella will lock into place.
- 7. **LED Light Attachment.** Attaching optional Shelta LED 'Flying Saucer' light (available at your Shelta retailer) is easy. Rotate the light attach bracket on underside of umbrella hub in either direction to cause it to drop down. The opened LED light is attached to this, then clicked closed. Battery life is at least 60 hours.

